

# 812 Software Release Notes

## 1.80 2/18/22

- Only show mute LED during power on
- Don't enforce theater mode when setting other unrelated input settings

## 1.81 3/3/22

- Remove 15s wait before rebooting
- Increase delay before voicing PoP to 6s
- Remove text at bottom of screen
- Make sure input LEDs are off when inputs are disabled
- Use shadow value for mute LED status instead of separate bool (for consistent behavior during boot)
- Fix a crash and performance regression in 1.80 input settings fix (SaveSettings? thread)

## 1.83 3/24/22

- Fix an infinite loop with theater mode and blend/balance
- Enter standby before restoring factory defaults
- Don't turn on line out when exiting standby
- Fix a crash when entering standby and upnp is streaming
- Add some missing settings to factory defaults
- Make the RelaysOff? function also disable headphone out
- Add a failure case through upnp for headphone out when theater mode is on
- Various theater mode fixes
- Threading fixes around AudioBase::UpdateTrackData? (source selection crash)
- Threading fixes around Bluetooth deselection (source selection crash)

# 812 Software Release Notes

## 1.84 3/25/22

- Adjust 812 unity gain to -19
- Move entering standby to the first thing in the factory reset sequence
- Release bump only

## 1.89 5/6/22

- Go into play state when paused and getting a UPNP OnSeekId?
- Add an LED volume indicator using the input LEDs
- Fix a CP crash when browsing UPNP on some servers (especially Asset)
- Fix input name defaults unreliability

## 1.92 5/10/2022

- Release bump only