

SYMPTOM	CAUSE	REMEDY
No Power Indication	Rear panel power switch is not on	Turn on power switch
	Power amplifier is not plugged in	Connect to AC Mains outlet
	Amp Rear panel fuse is blown	Replace blown fuse with same type / rating
	Home circuit breaker is tripped	Reset home circuit breaker
Red Power Indication	Low line voltage	Reset breaker on rear panel
	Thermal protection	Let amp cool and improve ventilation
	Clipping protection	Lower pre-amp volume and reset rear breaker if necessary
	DC on input	Correct the DC issue in source or preamp
	Defective Power Supply	Return Amp to dealer for service
White power indication, but no sound from one channel	No signal from one channel of source	Check source controls, cables, and connections
	One channel is muted by balance control	Re-center balance on preamp
	No signal out to power amplifier	Check connections from preamplifier
Front panel LED flashes white and red and no output	Amplifier has detected a fatal error	Return to dealer for service